

How to Use Automatic Transmission Fluid in Your Vehicle

Step-by-Step Guide

1. Check Specifications

Refer to your vehicle's owner manual for the correct ATF type and capacity requirements.

2. Prepare Your Vehicle

Ensure the vehicle is on level ground, the engine is warm, and the parking brake is engaged.

3. Drain Old Fluid

Remove the transmission pan or drain plug to allow old fluid to drain completely.

4. Replace Filter

Remove and replace the transmission filter to ensure clean fluid flow.

5. Add New Fluid

Fill with our premium automatic transmission fluid to the recommended level using a funnel.

6. Check Level

Run the engine, shift through gears, and check the fluid level using the dipstick. Top up if necessary.

Maintenance Tips

Change Intervals:

Replace ATF every 30,000-60,000 km (depending on manufacturer recommendations).

Regular Checks:

Check fluid level and condition monthly.

Warning Signs:

Watch for slipping gears, rough shifting, or burnt smell.

Disposal:

Properly recycle used transmission fluid at approved collection centers.

Benefits of Premium Automatic Transmission Fluid

- Enhanced transmission protection
- Better temperature stability
- Smooth and reliable shifting

- Extended transmission life
- Reduced friction and heat buildup
- Improved fuel efficiency