

How to Use Gear Oil in Your Vehicle

Step-by-Step Guide

1. Check Specifications

Refer to your vehicle's owner manual for the correct gear oil grade (SAE 90, SAE 140) and capacity.

2. Prepare Your Vehicle

Ensure the vehicle is on a level surface and the transmission is cool before proceeding.

3. Drain Old Oil

Remove the drain plug and allow old gear oil to drain completely into a suitable container.

4. Inspect Components

Check for metal shavings or contamination in the old oil, which may indicate internal wear.

5. Add New Gear Oil

Fill with our premium gear oil to the recommended level using a pump or squeeze bottle.

6. Check Level

Ensure the oil reaches the correct level as per the manufacturer's guidelines before securing the plug.

Maintenance Tips

Change Intervals:

Replace gear oil every 30,000-50,000 km or as recommended.

Regular Checks:

Inspect gear oil level during routine maintenance.

Warning Signs:

Look for grinding noises, difficulty in shifting gears, or leaks.

Disposal:

Recycle used gear oil at an authorized collection center.

Benefits of Premium Gear Oil

- Enhanced gearbox protection
- Better thermal stability
- Reduced friction and wear
- Improved lubrication efficiency

- Optimal performance in extreme temperatures
- Cleaner transmission operation