

How to Use Spanx Hydraulic Oil for Optimal Performance

Step-by-Step Guide

1. Check Specifications

Refer to your equipment's manual for the correct hydraulic oil type and capacity requirements.

2. Prepare the System

Ensure the hydraulic system is off, depressurized, and positioned on level ground.

3. Drain Old Fluid

Remove the hydraulic reservoir drain plug to allow the old fluid to drain completely.

4. Replace Filter

Remove and replace the hydraulic filter to ensure clean oil flow.

5. Add New Fluid

Fill with our premium hydraulic oil to the recommended level using a funnel.

6. Check System

Run the system, cycle hydraulic components, and check the fluid level. Top up if necessary.

Maintenance Tips

Change Intervals:

Replace hydraulic oil as per manufacturer recommendations.

Regular Checks:

Monitor fluid levels and condition weekly.

Warning Signs:

Look for slow response, overheating, or fluid contamination.

Disposal:

Properly recycle used hydraulic oil at approved collection centers.

Benefits of Premium Hydraulic Oil

- Superior wear protection
- High thermal stability
- Smooth and efficient operation
- Prevents oxidation and sludge buildup
- Withstands extreme pressure and temperature

- Extends equipment lifespan