

How to Use Spanx 4T Engine Oil

- Check compatibility with your vehicle and refer to the manufacturer's guidelines.
- Park on a level surface and turn off the engine before changing the oil.
- Drain the old oil completely before refilling with SPAN-X 4T Oil.
- Use the recommended oil grade and quantity specified in your owner's manual.
- Securely close the oil filler cap to prevent leaks.
- Start the engine and let it run for a few minutes to circulate the oil properly.
- Regularly check and maintain the oil level for optimal performance.