

How to Change Petrol Engine Oil in Your Vehicle

Step-by-Step Guide

1. Check Oil Type

Refer to your vehicle's owner manual for the correct engine oil grade and capacity.

2. Prepare Your Vehicle

Ensure the engine is warm, park on level ground, and engage the parking brake.

3. Drain Old Oil

Remove the oil drain plug and let the old oil drain completely into a container.

4. Replace Oil Filter

Remove the old oil filter and install a new one to ensure optimal filtration.

5. Add New Engine Oil

Pour in our premium petrol engine oil to the recommended level using a funnel.

6. Check Oil Level

Start the engine, let it run for a few minutes, then check the oil level using the dipstick. Top up if necessary.

Maintenance Tips

- Change Intervals

Replace engine oil every 5,000-10,000 km (depending on manufacturer recommendations).

- Regular Checks

Check the oil level and condition at least once a month.

- Warning Signs

Watch for excessive engine noise, overheating, or dark and sludgy oil.

- Disposal

Properly recycle used engine oil at approved collection centers.

Benefits of Premium Petrol Engine Oil

- Superior engine protection
- High temperature stability
- Improved fuel efficiency
- Reduces friction and wear

- Prevents overheating and sludge buildup
- Ensures smooth and reliable performance